

Cast Aluminum Plaques – 1300 Series

Surface & Lawn Mounted Installation Instructions

Thank you for selecting Salsbury Industries' 1300 series cast aluminum surface and lawn mounted plaques. We are confident that the quality and construction of the plaque will prove to be a good investment. These instructions are intended to assist you in a typical installation. It is recommended to have the plaque present before starting the installation.

Installation

Surface Mounted Plaques

1. Position plaque on flat surface at desired height and location and mark required screw holes.
2. Using 3/32" drill bit, drill the required pilot holes.
3. Mount plaque and secure.


Lawn Mounted Plaques

1. Place included stake(s) on the bottom (non-lettered) side of the plaque. Align the pre-drilled holes.
2. Insert 1/4" screws (provided) from the front (lettered) side through plaque and stake until secure and tight.
3. Push plaque into soft ground or lawn at desired location until secure and upright.

Cleaning

Using a soft cloth or sponge, clean the plaque with liquid soap, detergent, or diluted water-soluble household cleaners. Completely remove residue of any cleaning products with water and dry with a clean cloth.

Custom Plaques – Surface and Lawn Mounted

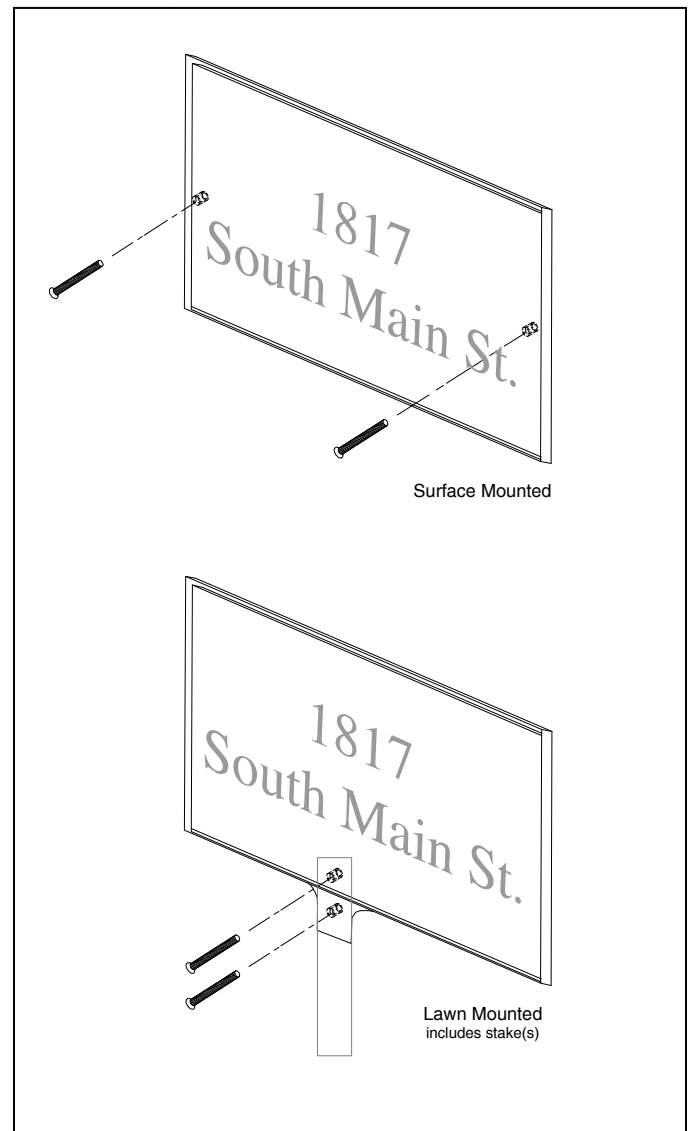

SALSBURY INDUSTRIES

1010 East 62nd Street, Los Angeles, CA 90001-1598
Phone: 1-800-624-5269 Int'l Phone: 323-846-6700
Fax: 1-800-624-5299 Int'l Fax: 323-846-6800
www.mailboxes.com engineering@mailboxes.com