

Large Commercial Signage – 1510/1520 Series

Surface Mounted Installation Instructions

Thank you for selecting Salsbury Industries' 1510 or 1520 series large commercial surface mounted signage. We are confident that the quality of the signage will prove to be a good investment. These instructions are intended to assist you in a typical installation.

Installation

The back of the signage has two (2) brackets with hooks at the upper end to enable hanging the signage on the mating slotted bracket installed on the wall mounting surface. The wall brackets are positioned such that the brackets and mounting screws will not be visible. The installation fasteners are not provided due to the variation in wall types. Choose fasteners and anchors appropriate for the type of wall and weight of the signage. Eight (8) of each are required.

Determine the location for the signage on the wall surface. -The wall brackets should be installed with the slotted bracket being above the lower clamping bracket as shown in the illustration.

The vertical distance between the mounting holes for the two (2) brackets is 1'-2" (14"). Measure this dimension carefully and use a spirit level for leveling. If the wall brackets are not installed horizontally and at the correct separation distance, the mating brackets on the signage may not mate correctly and securely to the wall brackets.

The horizontal distance between mounting holes should be transferred to the wall from the two (2) wall brackets. Install the brackets with the appropriate anchors and screws.

Back the clamping screws out most of the way in the bottom flanges of the two (2) signage brackets.


Hang the signage on the wall brackets, ensuring that both of the hooks on the signage brackets are securely engaged in the slots on the upper wall bracket. To facilitate proper engagement, tilt the bottom edge of the signage away from the wall while engaging the upper hooks. Once the upper hooks are engaged, pivot the signage bottom edge back against the wall.

The ends of the two (2) clamping screws should be below the flange of the lower wall bracket. Note that this flange angles downward. Adjust the two (2) clamping screws upward until their ends have engaged and tightened against the flange of the lower wall bracket. Ensure that these screws are securely clamped. Installation is now complete.

Cleaning

Using a soft cloth or sponge, clean the signage with liquid soap, detergent, or diluted water-soluble household cleaners. Completely remove residue of any cleaning products with water and dry with a clean cloth. Do not use abrasive cleaners on the signage.

Large Commercial Signage – Rectangular/Arched Designs

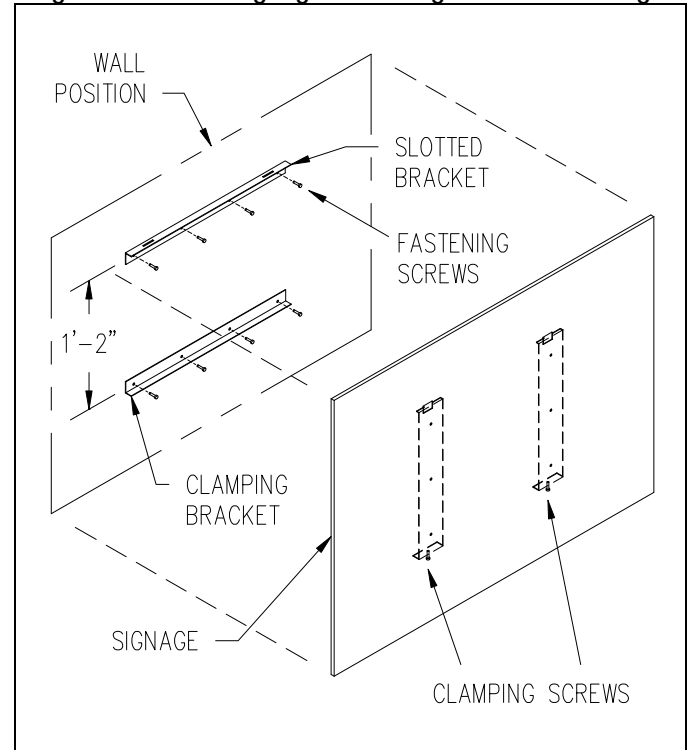

SALSBURY INDUSTRIES

1010 East 62nd Street, Los Angeles, CA 90001-1598
Phone: 1-800-624-5269 Int'l Phone: 323-846-6700
Fax: 1-800-624-5299 Int'l Fax: 323-846-6800
www.mailboxes.com engineering@mailboxes.com