

# Universal Pedestal – 3285

## Installation Instructions

Thank you for selecting Salsbury's 3285 universal pedestal. We are confident that the quality and construction of this product will provide years of maintenance free use.

### Preparatory Notes

The illustration shows a model 3285 universal pedestal. Installation should be performed by an experienced contractor. It is advisable to have the unit on hand before beginning construction of the concrete base.

### Constructing Concrete Base

Prepare a concrete pad at least 4 feet square (for 1 pedestal) by a minimum 6" depth. Concrete pad dimensions for multiple pedestals should be proportionally larger. The bottom hole for the concrete footing should be filled with about 6" of gravel to promote drainage under the pedestal. The top of the footing should be sloped for water runoff. The concrete must be below the frost line. Otherwise the pedestal will move when the ground freezes. Be careful not to puncture water, sewer or gas lines when digging holes for footing. The concrete pad should include reinforcing steel and four 1/2"-13 anchor bolts protruding at least 1" above the concrete surface for each box. Place the anchor bolts in a 4" by 10" pattern in the concrete to align with the holes in the pedestal base.


### Installing Pedestal On Concrete Base

When the concrete has cured sufficiently, install the four leveling nuts on the anchor bolts. Set the pedestal on the leveling nuts with the four anchor bolts protruding through the holes in the pedestal base plate. Adjust the leveling nuts to square up the pedestal. Install the remaining four nuts and washers on the anchor bolts and tighten securely.

### Installing A Box on Pedestal

Install two of the 5/16" carriage bolts in diagonally opposed mounting holes. Lift the unit onto the pedestal, allowing the two bolts to align with and protrude through two holes in the top of the pedestal. Install two of the washers and nuts and tighten by hand to secure the unit to the pedestal. Install the two remaining carriage bolts, washers and nuts. Tighten all nuts securely.

Model 3285 Universal Pedestal

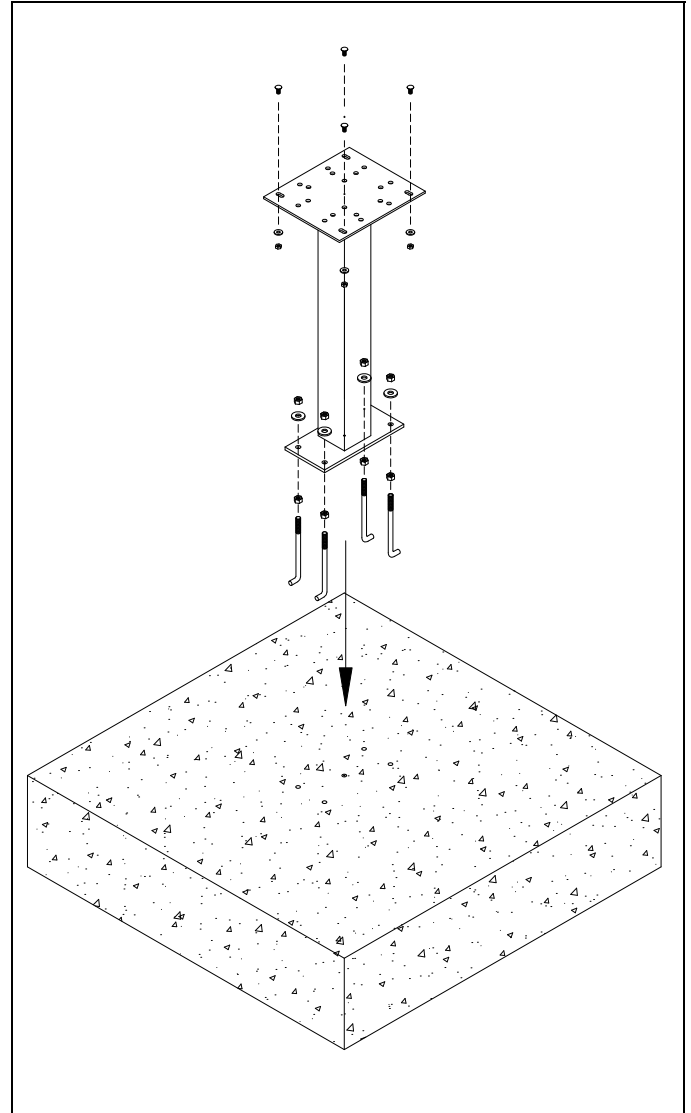

### SALSBURY INDUSTRIES

1010 East 62<sup>nd</sup> Street, Los Angeles, CA 90001-1598  
Phone: 1-800-624-5269 Int'l Phone: 323-846-6700  
Fax: 1-800-624-5299 Int'l Fax: 323-846-6800  
www.mailboxes.com engineering@mailboxes.com

Installation instructions are provided as general guidelines. It is advised that a professional installer be consulted. Salsbury Industries assumes no product assembly or installation liability. Copyright © 2009 Salsbury Industries. All rights reserved. (Rev. 02, 1/8/2009)