

# Cast Aluminum Plaques – 1300 Series

## Surface & Lawn Mounted Installation Instructions

Thank you for selecting Salsbury Industries' 1300 series cast aluminum surface and lawn mounted plaques. We are confident that the quality and construction of the plaque will prove to be a good investment. These instructions are intended to assist you in a typical installation. It is recommended to have the plaque present before starting the installation.

### Installation

#### Surface Mounted Plaques

1. Position plaque on flat surface at desired height and location and mark required screw holes.
2. Using 3/32" drill bit, drill the required pilot holes.
3. Mount plaque and secure.


#### Lawn Mounted Plaques

1. Place included stake(s) on the bottom (non-lettered) side of the plaque. Align the pre-drilled holes.
2. Insert 1/4" screws (provided) from the front (lettered) side through plaque and stake until secure and tight.
3. Push plaque into soft ground or lawn at desired location until secure and upright.

### Cleaning

Using a soft cloth or sponge, clean the plaque with liquid soap, detergent, or diluted water-soluble household cleaners. Completely remove residue of any cleaning products with water and dry with a clean cloth.

### Custom Plaques – Surface and Lawn Mounted

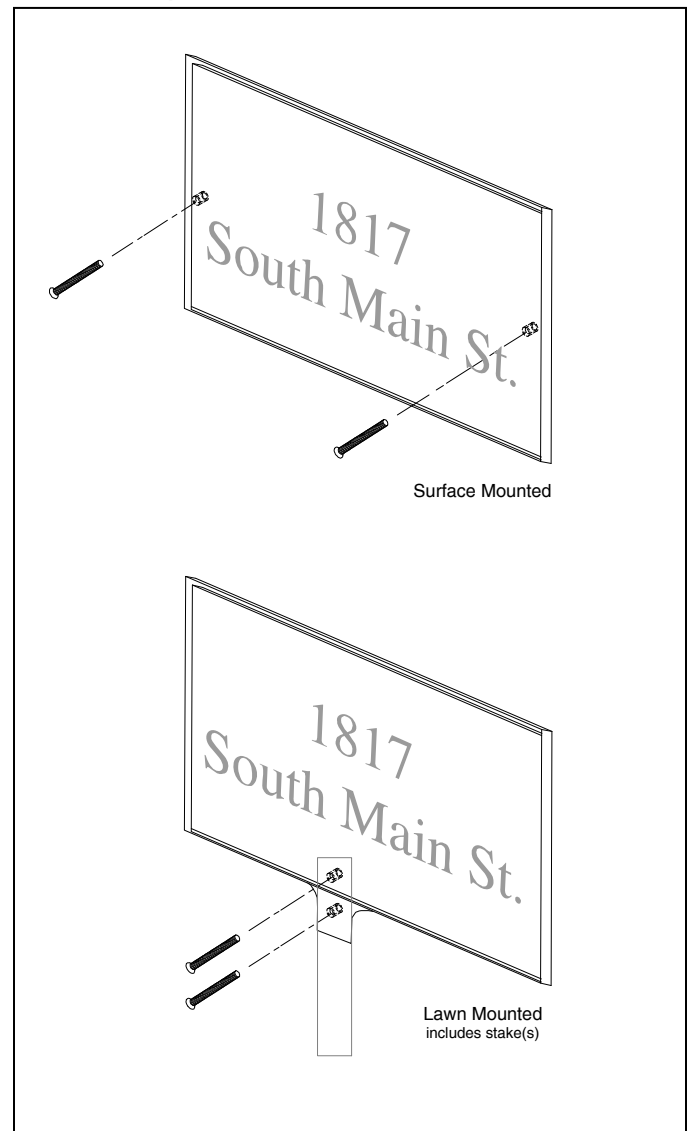

### SALSBURY INDUSTRIES

1010 East 62<sup>nd</sup> Street, Los Angeles, CA 90001-1598  
Phone: 1-800-624-5269 Int'l Phone: 323-846-6700  
Fax: 1-800-624-5299 Int'l Fax: 323-846-6800  
www.mailboxes.com engineering@mailboxes.com