
Free Standing Roll-a-Bouts 2300 Series Installation Instructions

Thank you for selecting Salsbury's 2300 series Free Standing Roll-a-Bouts. We are confident that the quality and construction of this product will provide years of maintenance free use.

Installation Instructions

- 1. Place the Roll-a-Bout enclosure upright on flat surface.
- 2. Open the rear door and starting at the bottom, load 5 aluminum mailbox modules (or 1 lower brass mailbox module if 2350).
- 3. Load 1 upper mailbox (only on 2350), <u>making sure it is</u> <u>pushed all the way forward.</u>
- 4. On model 2300, all 5 aluminum mailbox modules should have the rear flange placed within the notch of the supporting angle brackets on the Roll-a-Bouts.
- Close rear door and engage hasp and padlock eye. Lock with standard padlock if so desired.

2300 / 2350 Free Standing Roll-a-Bouts

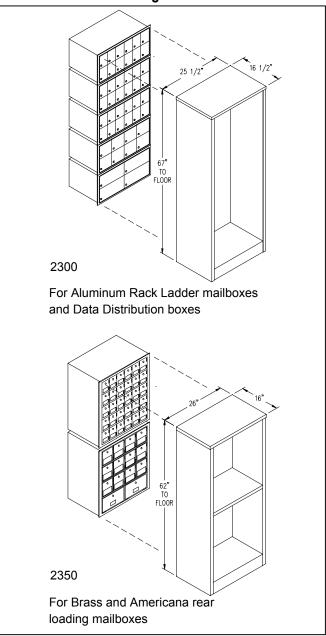

Note: order mailboxes separately

SALSBURY INDUSTRIES